 


AKZ 496

GB IE

 
PRODUCT DESCRIPTION SHEET

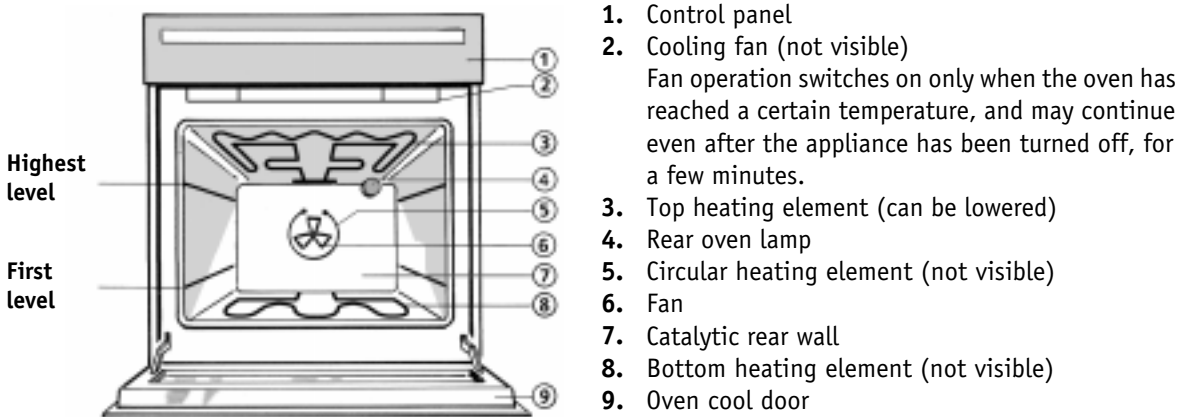





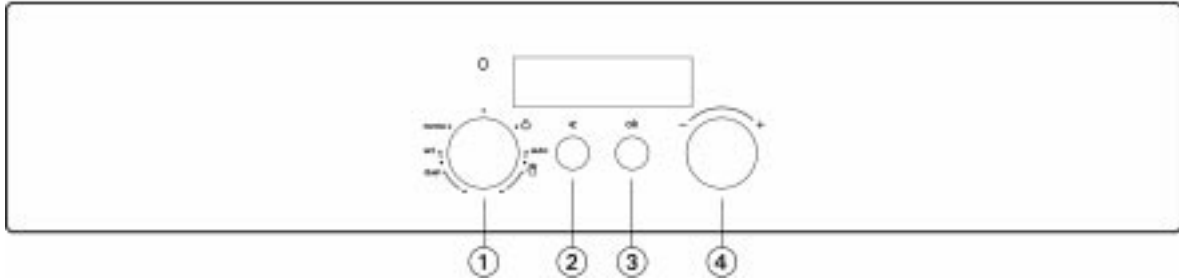


ACCESSORIES



















 









 


 














CONTROL PANEL





















1. ON/OFF - "F" Knob - Function Selector Knob.
2. Selection cancellation or back button.
3. Confirmation button
4. Pre-set values modification knob (temperature, time, levels) For browsing through the functions.


















Table of Oven Functions in manual mode 			
Function	Preset temperature	Adjustable temperature	Description of function
 CONVENTIONAL	200°C	50°C - 250°C	<ul style="list-style-type: none">To cook meat, fish and poultry in the oven.Preheat the oven to the required cooking temperature and place the food inside as soon as the oven asks you to.It is advisable to use the second or third level.
 PASTRY	175°C	50°C - 250°C	<ul style="list-style-type: none">To cook on max. two levels.If necessary, switch the position of the dishes in the oven for optimum cooking performance.
 FORCED AIR	160°C	50°C - 250°C	<ul style="list-style-type: none">To cook (without preheating) foods that require the same cooking temperature on one or more levels (e.g.: fish, vegetables, sweets), without transferring odours from one foodstuff to the other.
 ECONOMY GRILL	3	-	<ul style="list-style-type: none">To cook small pieces of meat (smoked bacon, steaks, sausages, etc.) and for making toast.This function activates the left side of the upper grill element only. The function allows various settings (1 min. - 5 max.).The default position is (3).Pre-heat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.It is advisable to turn the food during cooking.
 DUAL GRILL	3	-	<ul style="list-style-type: none">This function is ideal for cooking large pieces of meat (roast beef, roast joints) and for making toast.This function activates the entire top grill element. The function allows various settings (1 min. - 5 max.).The default position is (3).Pre-heat the oven for 5 min. with the door closed. For best results, leave the oven door open when grilling. Arrange food on the wire shelf. When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.It is advisable to turn the food during cooking.
 TURBO GRILL	3	-	<ul style="list-style-type: none">This function is ideal for cooking large pieces of meat (roast beef, roast joints).The function allows various settings (1 min. - 5 max.).Preheat the oven for 3/5 min.During cooking the door must remain closed.When cooking meat, to avoid spatters of fat and smoke, pour a little water into the drip tray.It is advisable to turn the food while it is cooked.

COOKING TABLES

FOOD	Function	Preheating	Level (from the bottom)	Temperature (°C)	Cooking time (minutes)
MEAT Lamb, Kid, Mutton		X	2	200	95 - 110
		X	3	200	100 - 110
		X	2	200	100 - 110
Roast (Veal, Pork, Beef) (1 kg)		X	2	200	95 - 110
		X	3	200	100 - 110
		X	2	200	90 - 100
Chicken, Rabbit, Duck		X	2	200	80 - 90
		X	2	190	80 - 90
		X	2	200	85 - 95
Turkey (4-6 kg) + level 3 browning		X	1	200	160 - 180
		X	1	200	160 - 180
		X	1	210	180 - 190
Goose (2kg)		X	2	210	100 - 130
		X	1	200	100 - 130
		X	2	200	100 - 130
FISH (WHOLE) (1-2 kg) Gilt-head, Bass, Tuna, Salmon, Cod		X	2	200	45 - 55
		X	3	190	45 - 55
		X	2	200	50 - 60
FISH (CUTLETS) (1 kg.) Sword Fish, Tuna		X	2	200	40 - 50
		X	3	190	40 - 50
		X	3	200	40 - 50
VEGETABLES Stuffed peppers and tomatoes		X	2	220	50 - 60
		X	2	200	50 - 60
		X	2	200	50 - 60
Baked potatoes		X	2	220	50 - 60
		X	2	200	50 - 60
SWEETS, PASTRIES, ETC. Raising cakes		X	2	190	40 - 50
		X	1	180	40 - 50
		X	2	180	40 - 50
Filled pies (with cheese)		X	2	190	80 - 90
		X	2	180	70 - 80
		X	2	180	80 - 90
Tarts		X	2	190	40 - 50
		X	2	180	40 - 50
		X	2	180	40 - 50
Applestrudel		X	2	200	50 - 55
		X	1 - 3	200	50 - 55
		X	2	200	50 - 55
Biscuits		X	2	170	20 - 30
		X	1 - 3	200	20 - 30
		X	2	200	20 - 30
Choux buns		X	2	180	35 - 45
		X	1 - 3	180	35 - 45
		X	2	180	40 - 50

FOOD	Function	Preheating	Level (from the bottom)	Temperature (°C)	Cooking time (minutes)
Savoury pies		X	2	200	40 - 50
		X	2	190	40 - 50
		X	2	190	40 - 50
Lasagna		X	2	200	45 - 60
		X	2	200	45 - 60
		X	2	200	45 - 60
Filled fruit pies e.g. Pineapple, Peach		X	2	190	50 - 60
		X	2	190	40 - 50
		X	2	190	40 - 50
Meringues		X	2	120	120 - 150
		-	1 - 3	120	120 - 150
		-	2	120	120 - 150
Vol-au-vents		X	2	200	35 - 45
		X	1 - 3	190	35 - 45
		X	2	190	35 - 45
Soufflés		X	2	200	40 - 50
		X	2	190	45 - 55
		X	2	190	45 - 55

COOKING TABLE FOR GRILL FUNCTION

FOOD	Function	Preheating	Level (from the bottom)	Power level	Cooking time (minutes)
Sirloin steak		X	4	5	35 - 45
Cutlets		X	4	5	30 - 40
Sausages		X	3 - 4	5	30 - 40
Pork chops		X	4	5	35 - 45
Fish (cutlets)		X	3 - 4	5	35 - 45
Chicken legs		X	3 - 4	5	40 - 50
Kebabs		X	3 - 4	5	40 - 50
Spare ribs		X	3 - 4	5	35 - 45
Chicken halves		X	3	5	45 - 55
Chicken halves		X	3	5	45 - 55
Whole chicken		X	3	5	60 - 70
Roast (pork, beef)		X	2	5	60 - 70
Duck		X	2	5	70 - 80
Leg of lamb		X	3	5	70 - 80
Roast beef		X	3	5	50 - 60
Baked potatoes		X	3	5	50 - 60
Fish (Gilt-head, Trout)		X	3	5	50 - 60

N.B.: Cooking times and temperatures are approximate only.